



item		item	
1	hub	15	o-ring 253 - 19357
2	cylinder	16	o-ring 259 - 19357
7	outer plate	17	o-ring 270 - 19357
8	inner plate	18	piston K1
9	stop plate	19	piston K2
11	o-ring 95 x 2	20	cup housing
12	o-ring 175 x 2	21	flange hub
13	o-ring 240 x 3	23.1	cover
14	o-ring 238 - 19357	23.2	oil level window

Caution !

The following points are essential for proper performance of the Tension Brake:

The Brake should only be operated at sufficient cooling oil volume.

The correct cooling oil volume is set by the manufacturer of the machine. It is prohibited to change the setting.

The intervals between oil changes recommended by the manufacturer of the machine should be maintained.

Exclusively use the oils stated in the respective oil recommendation list.